

I-CUBE X


Wi-miniDig communication protocol v4.5 I-CubeX Reference

I-CubeX: The ultimate MIDI controller!

Infusion Systems Ltd.
2033 Vendome avenue
Montreal, QC
Canada H4A 3M4
Tel: (514) 484-5850
Fax: (514) 484-5852
Email: info@infusionsystems.com
<http://www.infusionsystems.com>



9 August 2007
© Infusion Systems

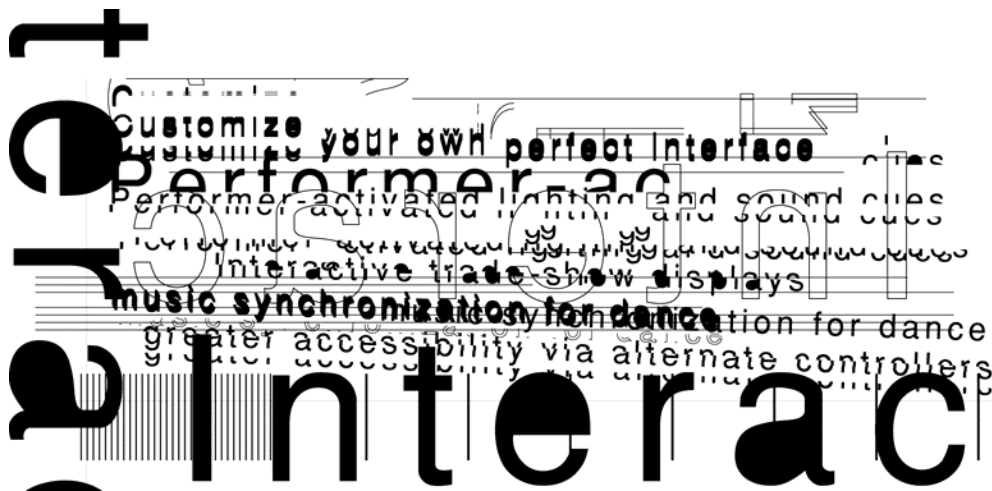

I-CubeX Wi-miniDig communication protocol v4.5

INTRODUCTION

The Wi-miniDig is a palm-sized hardware device that encodes analog voltage signals (such as generated by sensors) to music industry compliant MIDI messages with high resolution. It transmits these messages wirelessly to your computer, almost 4 times faster than MIDI speed, using the serial port profile (SPP) of Bluetooth?, a common and reliable protocol that allows for the use of multiple units simultaneously. It's firmware enables it to operate in both stand alone mode (sensor data is processed before it is transmitted) as well as host mode (raw sensor data is transmitted). Stand alone mode includes various sensor processing and mapping features such as gesture recognition that can be conveniently configured using one of our editors.

The Wi-miniDig is the wireless version of the miniDig. The firmware in both units uses the same functions and has the same features aside from the following:

1. Wi-miniDig has no MIDI cables
2. Wi-miniDig needs to connect to a Bluetooth? Server
3. Wi-miniDig won't transmit any data until it receives a RESET command

To communicate with the Wi-miniDig you need to have a Bluetooth? server interface such as a USB to Bluetooth? adaptor. You can then connect to the Wi-miniDig by using the serial port profile (SPP) service. The serial port setting of the Wi-miniDig is 115200 bps, no parity, 1 stop bit, 8 data bits, data flow ON. The pin number of the Bluetooth? module for the Wi-miniDig is "1".

In this documentation the communication protocol used by the Wi-miniDig is based on the MIDI protocol. Despite the fact that the Wi-miniDig has a different baud rate, uses a serial port and has no MIDI cables, you can use it as a MIDI device by running our bridging application that makes the serial port data available at a MIDI port. This way you can use any MIDI application to communicate with the Wi-miniDig. The "MIDI input" and "MIDI output" expressions used in this document therefore refer to a communication setup as established between the Wi-miniDig and the computer running our SPP bridging application to MIDI.

This document describes the I-CubeX Wi-miniDig communication protocol v4.5. The MIDI implementation version number is the same as the firmware version number and can be obtained by sending a DUMP VERSION command to the Wi-miniDig.

This specification is divided into **general**, **stand-alone mode** and **host mode** sections addressing programming commands as understood by the Wi-miniDig and transmitted messages as sent by the Wi-miniDig.

Both stand-alone and host mode are supported on Wi-miniDig units equipped with firmware version 4.3 or greater. Note that this document does not cover other versions than firmware version 4.5.

Infusion Systems' I-CubeX Wi-miniDig MIDI implementation uses the following data format for all system exclusive messages:

Byte	Description
240 (F0h)	System Exclusive Status
125 (7Dh)	Manufacturer ID
{DEV}	Device ID
{CMD}	Command or Message ID
[BODY]	Main Data
247 (F7h)	End of System Exclusive

Note that all numbers in hexadecimal notation are printed followed by a 'h', ie. 240 in decimal is shown as F7h in hexadecimal.

Manufacturer ID

The manufacturer identifies the manufacturer of a MIDI device. Infusion Systems uses the number 125 (7Dh). Infusion Systems does not own the manufacturer ID 125 (7Dh). This ID is usually reserved for general educational and/or research equipment. Please ensure that you do not have any devices with manufacturer ID 125 (7Dh) in your MIDI chain.

Device ID

This ID identifies a specific Wi-miniDig in setups with multiple Wi-miniDigs. This setting should remain 0 for use of the Wi-miniDig in stand-alone mode. Host mode allows for device IDs other than 0.

Command and Message IDs and [Main Data]

The Command and Message IDs and [Main Data] form the protocol for communication with the Wi-miniDig. The protocol consists of commands that are sent to the Wi-miniDig and messages that are sent by the Wi-miniDig. The Command and Message ID description and [Main Data] formats are described starting on the next page.

General Command and Message IDs and [Main Data]

This section describes the messages and commands for resetting the Wi-miniDig, setting the mode of operation (stand-alone or host mode), setting the device ID, setting MIDI thru operation and obtaining version information. These commands have the same effect both in stand-alone and host mode. This section also describes system status messages.

The I-CubeX Wi-miniDig uses the following general commands and messages.

Programming commands

- **MIDI system reset command**

The I-CubeX Wi-miniDig can be reset using the MIDI system reset command (255, FFh) in exactly the same way as when using the RESET command. A RESET ACK will be sent after completion of the reset command. The MIDI system reset command can be sent anytime during any message. Any other MIDI system real-time messages that are received in the Wi-miniDig MIDI input are ignored.

Command ID: MUTE (32, 20h)

The MUTE command stops the sampling of all sensor inputs. It can be used in both modes of operation. After completion of the MUTE command, the Wi-miniDig does not send out any MIDI messages representing sensor values. After a RESET, the Wi-miniDig is un-muted by default. The MUTE command is a toggle. Sending it the first time after power-up mutes all active sensor inputs, sending it a second time un-mutes them, and so forth. The Wi-miniDig does not send out any messages upon completion of this command.

There is no [BODY] associated with this command.

Example: 240, 125, 0 {DEV}, 32 {MUTE}, 247 (F0h, 7Dh, 00h, 20h, F7h)

Command ID: SET MUTE (50, 32h)

The SET MUTE command stops the sampling of all sensor inputs. It can be used in both modes of operation. After completion of the SET MUTE command, the Wi-miniDig does not send out any MIDI messages representing sensor values. After a RESET, the Wi-miniDig is un-muted by default. The Wi-miniDig does not send out any messages upon completion of this command.

There [BODY] of the MUTE command:

0xxxxxxx: xxxxxxx = 0; all sensor inputs un-muted
 xxxxxxx = [1..127]; all sensor inputs muted

Example: 240, 125, 0 {DEV}, 50 {SET MUTE}, 1 {xxxxxxx}, 247 (F0h, 7Dh, 00h, 32h, 01h, F7h)

Command ID: RESET (34, 22h)

The RESET command resets the Wi-miniDig, i.e. all internal circuitry and system variables stored in volatile memory are re-initialized. Non-volatile memory remains unchanged. When received by the Wi-miniDig set to host mode, the RESET command sets internal parameters stored in volatile memory to initial values as specified below. When received by the Wi-miniDig set to stand-alone mode, the RESET command retrieves the settings as stored in non-volatile memory and sets other internal parameters as specified below. The RESET command does not change any stand-alone mode settings stored in non-volatile memory but reloads them in volatile memory for operational use (when in stand-alone mode). The RESET command can also be initiated by sending a MIDI system reset (255, FFh). The single-byte MIDI system reset message can be sent anytime during any MIDI message. The RESET command is always executed following a power-up. Upon completion of the RESET command the RESET ACK message is sent out by the Wi-miniDig once or twice depending on the mode of operation of the Wi-miniDig.

There is no [BODY] associated with this command.

Example:

240, 125, 0 {DEV}, 34 {RESET}, 247 (F0h, 7Dh, 00h, 22h, F7h)

Initial values for RESET executed with Wi-miniDig set to host mode:

Mode of operation:	0; host mode
MIDI thru activation status:	retrieved from non-volatile memory (see MIDI THRU command)
System exclusive ID:	retrieved from non-volatile memory (see SET ID command)
Sensor sampling interval:	100 ms
Sensor input sampling resolution:	7 bit
Sensor input activation status:	0; off
Sensor input muting:	0; off

Initial values for RESET executed with Wi-miniDig set to stand-alone mode:

Mode of operation:	1; stand-alone mode
MIDI thru activation status:	retrieved from non-volatile memory (see MIDI THRU command)
System exclusive ID:	retrieved from non-volatile memory (see SET ID command)
Sensor input muting:	0; off
Other sensor input settings:	according to settings stored in non-volatile memory (see EDIT CONFIG command)

Command ID: DUMP VERSION (71, 47h)

This command requests the Wi-miniDig to send out its serial number and firmware version number. Upon completion of the command the Wi-miniDig sends out the VERSION message.

There is no [BODY] for the DUMP VERSION command.

Command ID: SET MODE (90, 5Ah)

This command sets the Wi-miniDig operation modes. The Wi-miniDig can function in host mode, or stand-alone mode.

Stand-alone mode allows the Wi-miniDig to be used without the need of a host computer because all settings are stored in non-volatile memory (EEPROM). All processing and mapping happens in the Wi-miniDig itself, so it can be directly connected to MIDI output devices such as synthesizers once it has been programmed using a host computer. This mode allows sensor inputs to be mapped to channel voice MIDI messages only (ie. no host mode type system exclusive MIDI messages are used for outputting sensor values). Stand-alone mode commands (including STREAM and INTERVAL), contrary to host mode commands, change the settings stored in non-volatile memory as well as volatile memory. Stand-alone mode commands are executed in both modes of operation, even though in host mode no channel voice MIDI messages are output to reflect any changed settings.

Host mode requires that the Wi-miniDig be connected with a host computer to control and store the Wi-miniDig settings. In host mode unprocessed sensor values are output only as system exclusive MIDI messages (ie. no stand-alone mode type channel voice MIDI messages processed from sensor values are output). Host mode allows use of multiple Wi-miniDigs in one MIDI chain. When using Max/MSP software, it allows multiple iCube / oCube Max/MSP objects for each Wi-miniDig (to this end, some of the commands are echoed back to the host computer). Host mode commands (except STREAM and INTERVAL), contrary to stand-alone mode commands, do not change the settings stored in non-volatile memory but only the settings stored in volatile memory. Generally, host mode commands have the same effect in either mode of operation – see for details the section on host mode commands.

When switching the operation mode, all settings stored in non-volatile memory remain unchanged but all settings stored in volatile memory are re-initialized to the values stored in non-volatile memory. When switching to host mode the initial values for host mode are used (see the RESET command). When switching to stand-alone mode the initial values for stand-alone mode are used (see the RESET command). The default factory value for the mode of operation is stand-alone mode. Upon completion of the command the Wi-miniDig sends out the MODE message.

The [BODY] of the SET MODE command is as follows:

```
0000000x:    x = 0; host mode
              x = 1; stand-alone mode
```

Command ID: DUMP MODE (91, 5Bh)

This command requests the Wi-miniDig to send out its mode of operation. The Wi-miniDig can function in host mode (for use with the icube plugin for Max/MSP), or stand-alone mode (otherwise). See the SET MODE command for more information on the mode of operation. Upon completion of the command the Wi-miniDig sends out the MODE message.

There is no [BODY] for the DUMP MODE command.

Command ID: SET ID (92, 5Ch)

The SET ID command sets the system exclusive device ID of the Wi-miniDig, enabling use of up to 128 Wi-miniDigs in one MIDI chain. The SET ID command can be sent with any device ID in the header of the system exclusive message, ie. the device ID will be set to the new value regardless of the current device ID of the Wi-miniDig receiving the SET ID command. The default factory value is 0. Upon completion of the command the Wi-miniDig sends out the same command.

The [BODY] of the SET ID command:

0xxxxxxx: xxxxxxx = [0..127]; new system exclusive device ID

Command ID: MIDI THRU (93, 5Dh)

This command sets the software MIDI thru operation of the Wi-miniDig. Note that other MIDI devices with a MIDI thru connector implement MIDI thru in hardware (resulting in much less delay). When MIDI thru is on, all MIDI messages that are not applicable to the Wi-miniDig are sent out the MIDI output. Applicable messages are the system exclusive messages with the manufacturer ID used by Infusion Systems as well as the Device ID used by the Wi-miniDig. In addition, when operating in stand-alone mode, other applicable messages are the channel voice messages for the MIDI channel the Wi-miniDig is set to using the EDIT CONFIG command. The default factory value is off (no MIDI thru). Upon completion of the command the Wi-miniDig sends out the same command.

The [BODY] of the MIDI THRU command is:

0xxxxxxx: xxxxxxx = 0; MIDI thru off
 xxxxxxx > 0; MIDI thru on

Command ID: MIDI RUNNING STATUS (94, 5Eh)

This command sets the MIDI running status feature of the Wi-miniDig. When this is set to ON (xxxxxxx > 0) the Wi-miniDig will always send the MIDI status byte each time it sends a MIDI message. For example if the running status feature of the Wi-miniDig is ON then the output MIDI message from the Wi-miniDig for two MIDI note-on command (9xh where x is a number from 0 to 15 representing the MIDI channel number between 1 and 16) on MIDI channel 1 will be "90h n1 v1 90h n2 v2". Where 90h is the running status byte for a note-on on channel 1, n1 & n2 are the note number values between 0 to 127 (for MIDI note-on 1 and 2) and v1 & v2 are the velocity values between 0 and 127 for MIDI note-on 1 and 2. When the MIDI running status feature is set to OFF (xxxxxxx = 0) the Wi-miniDig will only send a running status byte when it is different from the last one that was sent. For example the running status for two notes would be: "90h n1 v1 n2 v2". This feature is useful when the data stream is large. It removes unwanted repetition of the current status so that this can slightly reduce the latency and the amount of MIDI data flow. It should be set to OFF if not used for the reasons mentioned above because MIDI equipment (such as software or a synthesiser) will not respond to MIDI events if it never received the last MIDI status byte sent (in the event that the Wi-miniDig was unplugged/replugged).

The [BODY] of the MIDI RUNNING STATUS command is:

0xxxxxxx: xxxxxxx = 0; MIDI running status off
 xxxxxxx > 0; MIDI running status on

Transmitted messages

Message ID: RESET ACK (35, 23h)

The RESET ACK message provides acknowledgement that the Wi-miniDig has been reset. A reset is performed when the Wi-miniDig is powered up, or when a RESET command is sent to it. If the Wi-miniDig is set to host mode and a RESET command is sent, the Wi-miniDig will send out the RESET ACK message once (visible as one blink of the MIDI output LED). If in stand-alone mode the RESET ACK message will be sent out twice with a 200 ms interval in between the two messages (visible as two blinks of the MIDI output LED).

There is no [BODY] for the RESET ACK message.

Message ID: STATUS (37, 25h)

The STATUS message indicates an error in the system. The [BODY] of the STATUS message indicates the type of problem encountered.

The [BODY] of the reset message:

0xxxxxxx:	xxxxxxx = 90 (5Ah);	configuration setting error
	xxxxxxx = 92 (5Ch);	MIDI protocol error (a DATA byte of the message is > 127)
	xxxxxxx = 94 (5Eh);	MDI byte has been scrambled
	xxxxxxx = 95 (5Fh);	receive buffer is full, data may be lost (too much MIDI data is being sent to the Wi-miniDig too quickly)

Example:

240, 125, 0 {DEV}, 37 {STATUS}, 95 {DATA}, 247 (F0h, 7Dh, 00h, 25h, 5Fh, F7h)
This message indicates that too much MIDI data is being sent to the Wi-miniDig too quickly.

Message ID: VERSION (71, 47h)

This message contains the Wi-miniDig firmware version number, hardware board version number as well as the serial number.

The [BODY] of the VERSION message is as follows:

0xxxxxxx:	xxxxxxx = [0..127]; firmware version number * 10
0aaaaaaa:	aaaaaaa = [0..99]; hardware board version number * 10
0bbbbbbb:	bbbbbbb = [0..99]; hardware board version number decimals * 1000
0ccccccc:	ccccccc = [0..99]; 1 st serial number digits
0ddddddd:	ddddddd = [0..99]; last serial number digits

Example:

240, 125, 0 {DEV}, 71 {VERSION}, 44 {xxxxxxx}, 50 {aaaaaaa}, 0 {bbbbbbb}, 01 {ccccccc}, 23 {ddddddd}, 247 (F0h, 7Dh, 00h, 47h, 2Ah, 32h, 00h, 01h, 17h, F7h)

The firmware version for the Wi-miniDig is $45 / 10 = 4.5$. The hardware board version number is $50 / 10 + 0 / 1000 = 5.00$. The serial number is 0123. These numbers should correspond with numbers printed on the sticker at the bottom of the Wi-miniDig – if they don't correspond the Wi-miniDig may have been upgraded to an updated firmware version after its date of purchase.

Message ID: MODE (91, 5Bh)

This message contains the Wi-miniDig operation mode. The Wi-miniDig can function in host mode (for use with Max/MSP), or stand-alone mode (otherwise). See the SET MODE command for more information on the mode of operation.

The [BODY] of the MODE message is as follows:

0000000x:	x = 0; host mode
	x = 1; stand-alone mode

Stand-alone mode Command and Message IDs and [Main Data]

This section describes the programming protocol, consisting of commands sent to the Wi-miniDig and messages sent by the Wi-miniDig, for stand-alone mode. This mode allows the Wi-miniDig to be used without the need of computer software to process the sensor data because all settings are stored in non-volatile memory (EEPROM). All processing and mapping happens in the Wi-miniDig itself, so it can be directly connected to MIDI devices such as (software) synthesizers once it has been programmed using a host computer. This mode allows sensor inputs to be mapped to channel voice MIDI messages only (ie. no host mode type system exclusive MIDI messages are used for outputting sensor values). Stand-alone mode commands (including STREAM and INTERVAL), contrary to host mode commands, change the settings stored in non-volatile memory as well as volatile memory. Stand-alone mode commands are executed in both modes of operation, even though in host mode no channel voice MIDI messages are output to reflect any changed settings.

The I-CubeX Wi-miniDig in stand-alone mode uses the following commands and messages to change the settings stored in non-volatile memory.

Programming commands

Command ID: STREAM (1, 01h)

Each sensor input of the Wi-miniDig can be turned on or off by using the STREAM command if a signal analysis method has been selected (impulse and/or continuous signal analysis, see EDIT CONFIG command). If no signal analysis method has been selected the STREAM command has no effect. In stand-alone mode the activation status of the sensor input is stored in non-volatile memory as well as volatile memory for immediate use, while in host mode the activation status is only stored in volatile memory. Following the activation of a sensor input the MIDI message to which the sensor value is mapped as set using the EDIT CONFIG command, is sent out by the Wi-miniDig each time the mapped sensor value changes. After a RESET command in stand-alone mode the activation status is retrieved from non-volatile memory - each sensor input is turned on or off depending on whether any of the signal analysis methods is activated. The factory default value of the sensor activation status is off. Upon completion of the command the Wi-miniDig sends out the same message.

The [BODY] of the STREAM command consists of a single 7-bit byte with the following format :

0x000yyy: x = 1; on
 x = 0; off
 yyy = [0..7]; sensor input number, where the first sensor input
 number = 0, and the last (8th) sensor input number = 7

Example:

In order to turn the 3rd sensor input on, the following message is sent:
240, 125, 0 {DEV}, 1 {STREAM}, 66 {x = 1, yyy = 02}, 247 (F0h, 7Dh, 00h, 01h, 42h, F7h)

In order to turn the same sensor input off, the following message is sent:
240, 125, 0 {DEV}, 1 {STREAM}, 2 {x = 0, yyy = 02}, 247 (F0h, 7Dh, 00h, 01h, 02h, F7h)

Command ID: INTERVAL (3, 03h)

The Wi-miniDig's global sampling interval can be set to speed up or slow down data acquisition. The interval is set in milliseconds with 4 ms being the lowest (ie. highest rate), and 16383 ms (about 16 seconds) being the highest (ie. lowest rate). When the INTERVAL command is sent in stand-alone mode the sample interval will be stored in non-volatile memory as well as in volatile memory for immediate use, while in host mode it will be stored in volatile memory only. The factory default setting of the sampling interval is 100 ms. After a RESET in stand-alone mode, the sampling interval is retrieved from non-volatile memory while in host mode it is set to the factory default value of 100 ms. Upon completion of the command the same command is sent out by the Wi-miniDig. If the INTERVAL command is sent with value less than 4 the sampling interval will not be set to a value less than 4 but instead a message identical to the INTERVAL command will be sent out by the Wi-miniDig containing the current sampling interval.

The INTERVAL command [BODY] is composed of 2 bytes each containing a 7-bit number. The first byte is the most significant byte, while the second byte is the least significant byte.

The [BODY] of the INTERVAL command:

0xxxxxxx: xxxxxxx = [0..127]; sample interval MSB
0yyyyyyy: yyyyyyy = [0..127]; sample interval LSB

where sample interval = xxxxxxx * 128 + yyyyyyy

Example: To set the sampling interval to 1 second (1000 ms), the following command is sent:
240, 125, 0 {DEV}, 3 {INTV}, 7 {xxxxxxx}, 104 {yyyyyyy}, 247 (F0h, 7Dh, 00h, 03h, 07h, 68h, F7h)
The sample interval is $7 * 128 + 104 = 1000$

Command ID: EDIT NAME (100, 64h)

The EDIT NAME command stores the name (as ASCII encoded characters) of the configuration currently stored in the Wi-miniDig. Upon completion of the command the Wi-miniDig sends out a NAME message.

The [BODY] of the EDIT NAME command is:

```
00000001:      1; configuration number
0aaaaaaa:      aaaaaaa = [0..127]; 1st character, factory default = "m" (6Dh)
0bbbbbbb:      bbbbbbb = [0..127]; 2nd character, factory default = "i" (69h)
0ccccccc:      ccccccc = [0..127]; 3rd character, factory default = "n" (6Eh)
0ddddddd:      ddddddd = [0..127]; 4th character, factory default = "i" (69h)
0eeeeeee:      eeeeeee = [0..127]; 5th character, factory default = "D" (44h)
0ffffff:       ffffff = [0..127]; 6th character, factory default = "i" (69h)
0ggggggg:      ggggggg = [0..127]; 7th character, factory default = "g" (67h)
0hhhhhhh:      hhhhhh = [0..127]; 8th character, factory default = " " (20h)
```

Command ID: DUMP NAME (101, 65h)

The DUMP NAME command is used to obtain the name of the current configuration of the Wi-miniDig. Upon completion of the command the Wi-miniDig sends out a NAME message.

The DUMP NAME command has the following [BODY]:

```
00000001:      1; configuration number
```

Command ID: CLEAR CONFIG (105, 69h)

The CLEAR CONFIG command sets all settings stored in non-volatile memory to default factory values and re-initializes all internal parameters to the initial values for a Wi-miniDig set to stand-alone mode (see RESET – note that the RESET is not executed). See the EDIT NAME, EDIT CONFIG commands for default values of settings stored in non-volatile memory. Upon completion of the command the Wi-miniDig sends the same command.

The [BODY] of the CLEAR CONFIG command:

```
00000001:      1; configuration number
```

Factory default values for each sensor input are re-instated for:

```
MIDI thru:                0; off
MIDI running status       1; on
System exclusive ID:      0
Mode of operation:        1; stand-alone
Configuration name:       "Wi-miniDig "
Sensor sampling rate:     100 ms
Sensor input MIDI mapping type: 3; control-change
Sensor input impulse end notification: 0; off
Sensor input impulse maximum set to constant: 0; off
Sensor input cont. and/or impulse signal differentiation: 0; off
Sensor input continuous signal averaging: 0; off
Sensor input impulse signal analysis: 0; off
Sensor input continuous signal analysis: 0; off
Sensor input threshold:   0
Sensor input ceiling:     127
Sensor input noise gate:  0; off
Sensor input time window: 0; off
```

Command ID: EDIT CONFIG (106, 6Ah)

Each of the sensor inputs of the Wi-miniDig can be edited using the EDIT CONFIG command. Upon completion of the command the Wi-miniDig is re-initialized with the new settings and the Wi-miniDig sends out a CONFIG message. The EDIT CONFIG command can be used to start sending out MIDI messages calculated from sensor values immediately while the Wi-miniDig is powered, but it is also possible to send a STREAM command to the Wi-miniDig. Activating either or both signal analysis methods will enable the sending of MIDI messages. To change the sampling interval use the INTERVAL command. The RESET command does not change any of the settings as stored by the EDIT CONFIG command in non-volatile memory.

Editing sensor inputs

To edit a sensor input of the Wi-miniDig the [BODY] of the EDIT CONFIG command consists of the following bytes:

00000001:	1; configuration number
00000aaa:	aaa = [0..7]; sensor input number
0bbbcccc:	bbb = [0..6]; MIDI mapping type (0 = note-off, 1 = note-on, 2 = key-pressure, 3 = control-change, 4 = program-change, 5 = after-touch, 6 = pitch-bend) cccc = [0..15]; MIDI channel
0ddddddd:	ddddddd = [0..127]; note number (mapping type 0..2), controller number (mapping type 3), irrelevant for mapping type 4..6
00efghij:	e,f,g,h,i,j determine signal processing settings, see notes for combining e = [0,1]; impulse end notification (0 = off, 1 = on) f = [0,1]; impulse maximum/minimum constant (0 = off, 1 = on) g = [0,1]; continuous and/or impulse signal differentiation (0 = off, 1 = on) h = [0,1]; continuous signal averaging (0 = off, 1 = on) i = [0,1]; impulse signal analysis (0 = off, 1 = on) j = [0,1]; continuous signal analysis (0 = off, 1 = on)
0kkkkkkk:	kkkkkkk = [0..127]; sensor input threshold
0mmmmmmm:	mmmmmmm = [0..127]; sensor input ceiling
0nnnnnnn:	nnnnnnn = [0..127]; noise gate
0pppqqqq:	ppp = [0..7]; represents constant value activated with {f} qqqq = [0..15]; time window

Factory default settings for each sensor input are:

Sensor input MIDI mapping type {bbb}:	3; control-change
Sensor input MIDI channel mapping {cccc}:	0
Sensor input MIDI note number mapping {ddddddd}:	sensor input nr {aaaaa} + 1
Sensor input impulse end notification {e}:	0; off
Sensor input impulse maximum set to constant {f}:	0; off
Sensor input cont. and/or impulse signal diff. {g}:	0; off
Sensor input continuous signal averaging {h}:	0; off
Sensor input impulse signal analysis {i}:	0; off
Sensor input continuous signal analysis {j}:	1; on
Sensor input threshold {kkkkkkk}:	0; minimum
Sensor input ceiling {mmmmmmm}:	127; maximum
Sensor input noise gate {nnnnnnn}:	1
Sensor input constant value {ppp}:	0
Sensor input time window {qqqq}:	0; off

Mapping sensor inputs

Impulse signal analysis is useful when the sensor signal can be characterized as an impulse, ie. as either rising from below a minimum value to a maximum value after which it eventually drops below a certain minimum value, or as dropping below a minimum value after which it eventually rises above a certain maximum value. Subsequent impulses may appear asynchronously. Continuous signal analysis is useful when the sensor signal can be characterized as a continuously varying signal without any specific start or end.

The impulse signal analysis settings are the activation status {i} which will also start sampling of the sensor input, the time window setting {qqqq} within which {qqqq} + 1 sensor values are compared so as to find the highest value (peak search, where the threshold {kkkkkkk} is smaller than {mmmmmmm}) or lowest value (dip search, where the threshold {kkkkkkk} is greater than {mmmmmmm}), the end notification setting {e} which provides a way to determine the duration of the impulse, the maximum/minimum constant setting {f} in which the time window {qqqq} is not used and which provides a way to output each impulse maximum/minimum (peak/dip) as a constant of value $16 \times \{ppp\} + 15$, ie. There are only 8 constant values available. If the sensor value rises above {mmmmmmm} ({mmmmmmm} greater than {kkkkkkk}) or drops below {mmmmmmm} ({mmmmmmm} smaller than {kkkkkkk}) before {qqqq} + 1 samples have been obtained, the peak/dip search is stopped and is immediately output as peak/dip value.

The continuous signal analysis settings are the activation status {j} which will also start sampling of the sensor input, the averaging setting {g} which enables calculation of the average of a number of sensor values, the time window setting {qqqq} within which {qqqq} + 1 sensor values are taken to calculate the average value, the differentiation setting {g} which enables calculation of the difference between the current and last output value.

Continuous signal analysis can be combined with impulse signal analysis and will be useful for sensor signals that have an onset with a local maximum or minimum after which the sensor value continues for some time to stay above the minimum or below the maximum before it eventually drops below the minimum or rises above the maximum.

Impulse signal analysis can also be applied to continuously varying signals such as AC (alternating current) signals and recurring impulses of which only the peak (or dip) value is relevant (deactivate impulse end notification ({e} = 0) to avoid sending out MIDI value zero).

In both impulse and signal analysis the 10-bit sensor value is scaled between the threshold {kkkkkkk} and ceiling {mmmmmmm}, and the resulting value has to increase beyond the noise gate {nnnnnnn} divided by 2 (mapping types 1-5) or beyond the noise gate {nnnnnnn} times 4 (mapping type 6) before being output. After passing the noise gate the value itself or the absolute difference between the current and last calculated value can be output by activating the differentiation setting {g}.

If either impulse or continuous signal analysis is active, the calculated values are represented by the 2nd data field of a MIDI channel voice note-off (header 80h), note-on (header 90h), key-pressure (header A0h) message with note number {ddddddd}, or by the 2nd data field of a control-change (header B0h) message with control number {ddddddd}, or by the 1st data field of a program-change (header C0h) or after-touch (header D0h) message or by the two data fields of a pitch-bend (header E0h) message.

If both impulse and continuous signal analysis are active the sensor value's start and end are characterized using impulse signal analysis and represented as one of the channel voice MIDI messages listed above, while the signal between start and end is characterized using continuous signal analysis and always represented as the key-pressure value of a MIDI channel voice key-pressure (header A0h) message. Note that if averaging is activated, {qqqq} will also be used for determining the averaging window, ie. {qqqq} + 1 samples will be taken for peak/dip detection and subsequently {qqqq} + 1 samples will be taken for averaging.

For example, if impulse signal analysis is activated ($\{i\} = 1$), the threshold $\{kkkkkkk\}$ is smaller or equal than the ceiling $\{mmmmmmm\}$ and note-on mapping has been selected, then, once the sensor value rises above the threshold $\{kkkkkkk\}$, a note-on message with velocity value greater than zero will be sent and no new note-on message with velocity greater than zero will be sent until the sensor value has dropped below $\{kkkkkkk\}$. If continuous signal analysis is activated as well ($\{j\} = 1$), then, after sending a note-on message, the sensor value will be represented by the key-pressure data field of a MIDI channel voice key-pressure message, until the sensor drops below $\{mmmmmmm\}$ upon which a note-on message with velocity zero will be sent out.

If either impulse or continuous signal analysis is activated, MIDI messages calculated as defined by the signal analysis method will be sent out. If both are deactivated no MIDI output is generated. MIDI running status is implemented in the MIDI output mapping when using stand-alone mode.

Command ID: DUMP CONFIG (107, 6Bh)

The DUMP CONFIG command is used to obtain the current settings of the Wi-miniDig. Upon completion of the command the Wi-miniDig sends out a CONFIG message.

The Wi-miniDig will send out the configuration of a Wi-miniDig sensor input when using the DUMP CONFIG command with the following [BODY]:

```
00000001:    1; configuration number
00000aaa:    aaa = [0..7]; sensor input number
```

Transmitted messages

Message ID: NAME (101, 65h)

The NAME message contains the name (as ASCII encoded characters) of the configuration currently stored in the Wi-miniDig.

The [BODY] of the NAME message is identical to the [BODY] of the EDIT NAME command.

Message ID: CONFIG (106, 6Ah)

The CONFIG message contains the configuration of a sensor input.

When receiving the configuration of a sensor input, the [BODY] of the CONFIG message is identical to the [BODY] of the EDIT CONFIG command.

Host mode Command and Message IDs and [Main Data]

This section describes the programming protocol, consisting of commands sent to the Wi-miniDig and messages sent by the Wi-miniDig, for host mode. This mode requires that the Wi-miniDig is connected with a host computer to control and store the Wi-miniDig settings. In host mode unprocessed, raw sensor values are output only as system exclusive MIDI messages (ie. no stand-alone mode type channel voice MIDI messages processed from sensor values are output). Host mode allows the use of multiple Wi-miniDigs. When using Max/MSP software, it allows multiple iCube / oCube Max/MSP objects for each Wi-miniDig (to this end, some of the commands are echoed back to the host computer). Host mode commands (except STREAM and INTERVAL), contrary to stand-alone mode commands, do not change the settings stored in non-volatile memory but only the settings stored in volatile memory. Generally, host mode commands have the same effect in either mode of operation – see for details below.

The I-CubeX Wi-miniDig in host mode uses the following commands and messages.

Programming commands

Command ID: STREAM (1, 01h)

Each sensor input of the Wi-miniDig can be turned on or off by using the STREAM command. Upon completion of the command the activation status of the sensor input is stored in volatile memory only, when in host mode, and in both volatile as well as non-volatile memory when in stand-alone mode. In host mode STREAM messages are output, while in stand-alone mode channel voice messages are output. After a RESET command in host mode each sensor input is turned off, while in stand-alone mode the activation status is retrieved from non-volatile memory.

The [BODY] of the STREAM command consists of a single 7-bit byte with the following format:

0x000yyy: x = 1; on
 x = 0; off
 yyy = [0..7]; sensor input number, where the first sensor input
 number = 0, and the last (8th) sensor input number = 7

Example:

In order to turn the 7th sensor input on, the following message is sent:

240, 125, 0 {DEV}, 1 {STREAM}, 70 {x = 1, yyy = 6}, 247 (F0h, 7Dh, 00h, 01h, 46h, F7h)

In order to turn the same sensor input off, the following message is sent:

240, 125, 0 {DEV}, 1 {STREAM}, 6 {x = 0, yyy = 6}, 247 (F0h, 7Dh, 00h, 01h, 06h, F7h)

Command ID: RES (2, 02h)

In host mode, each sensor input can either be sampled with 10-bit (hi-res) or 7-bit (lo-res) resolution. After a RESET, the resolution for each input is set to lo-res by default (in host mode). Upon completion of the command the Wi-miniDig sends out the same command. In stand-alone mode this command is only useful when sending the SAMPLE command because in stand-alone mode sensor inputs are always sampled with 10-bit resolution.

The RES command's [BODY] is formatted the same as the STREAM command (the Command ID is the only difference):

0x000yyy: x = 1; hi-res (10-bit mode)
 x = 0; lo-res (7-bit mode)

 yyy = [0..7]; sensor input number, where the first sensor input
 number = 0, and the last (8th) sensor input number = 7

Example:

In order to turn the 2nd sensor input to hi-res mode, the following message is sent:
240, 125, 0 {DEV}, 2 {RES}, 65 {x = 1, yyy = 1}, 247 (F0h, 7Dh, 00h, 02h, 41h, F7h)

In order to turn the same sensor input to lo-res mode, the following message is sent:
240, 125, 0 {DEV}, 2 {RES}, 1 {x = 0, yyy = 1}, 247 (F0h, 7Dh, 00h, 02h, 01h, F7h)

Command ID: INTERVAL (3, 03h)

The Wi-miniDig's sampling interval can be set to speed up or slow down data acquisition. The sample interval applies to all sensor inputs, ie. it is not possible to set a different sample interval for each sensor input. The interval is set in milliseconds with 4ms being the lowest (ie. highest rate), and 16383ms (about 16 seconds) being the highest (ie. lowest rate). When the INTERVAL command is sent in host mode the sampling interval is stored in volatile memory, while in stand-alone mode it is stored in both volatile as well as non-volatile memory. After a RESET in host mode, the sampling interval is set to 100ms, while in stand-alone mode it is retrieved from non-volatile memory. Upon completion of the command the Wi-miniDig sends out the same command. If the INTERVAL command is sent with value 0 the sampling interval will not be set to 0 but instead the Wi-miniDig will send out an INTERVAL command with the current sampling interval.

The INTERVAL command [BODY] is composed of 2 bytes each containing a 7-bit number. The first byte is the most significant byte, while the second byte is the least significant byte.

The [BODY] of the INTERVAL command:

0xxxxxxx: xxxxxxx = [0..127]; sample interval MSB
0yyyyyyy: yyyyyyy = [0..127]; sample interval LSB

where sample interval = xxxxxxx * 128 + yyyyyyy

Example:

In order to set the sampling interval to 1 second (1000 ms), the following command is sent:
240, 125, 0 {DEV}, 3 {INTERVAL}, 7 {xxxxxxx}, 104 {yyyyyyy}, 247 (F0h, 7Dh, 00h, 03h, 07h, 68h, F7h)

The sample interval is $7 * 128 + 104 = 1000$

Command ID: SAMPLE (4, 04h)

The SAMPLE command provides a snapshot of the data coming out of a single sensor input. In order to use SAMPLE for a sensor input, that sensor input *must* be turned off (it is redundant to sample a sensor input that is turned on since it is already being sampled continuously). Upon completion of the command the Wi-miniDig sends out the SAMPLE DATA message, whether in host or stand-alone mode.

The [BODY] of the SAMPLE command is composed of one byte - the sensor input number:

00000yyy: yyy = [0..7]; sensor input number, where the first sensor input number= 0, and the last (8th) sensor input number = 7

Example:

In order to sample sensor input 5 (provided it is turned off), the following message is sent:

240, 125, 0 {DEV}, 4 {SAMPLE}, 4 {yyy}, 247 (F0h, 7Dh, 00h, 04h, 04h, F7h)

Transmitted messages

Note that in the following listing the commands as echoed back by the Wi-miniDig (to allow multiple Max/MSP objects to work with a Wi-miniDig) are not included.

Message ID: STREAM DATA (0, 00h)

The Wi-miniDig, when in host mode, sends it's sensor input values, after being activated through a STREAM command, in the STREAM DATA message.

The [BODY] of the STREAM DATA message contains a list of sensor values from all active (turned on) sensors, in ascending order. Inactive sensors are not included in the list. Both 7-bit and 10-bit sensor values are packed together - 10-bit values are sent using two bytes, where the first byte contains the first 7 bits of the sensor value and the second byte contains the last 3 bits of the sensor value:

 Oyyyyyyy: (7-bit lo-res mode)
or
 Oyyyyyyy, 000zzz00: (10-bit hi-res mode)

 yyyyyyy = [0..127]; the most significant bits (or a full data byte in lo-res mode)
 zzz = [0..7]; the 3 least significant bits (used in 10-bit hi-res mode only)

Example:

The Wi-miniDig has sensor input 1 turned on in lo-res mode (7-bit), sensor input 5 turned on in hi-res mode (10-bit), and sensor input 8 turned on in lo-res mode (7-bit). All other sensor inputs are turned off. The Wi-miniDig acquires the value 100 (sensor input 1), 1000 (sensor input 5), and 21 on (sensor input 8). The Wi-miniDig sends the following message:

240, 125, 0 {DEV}, 0 {STREAM DATA}, 100 {yyyyyyy of sensor input 1}, 125 {yyyyyyy of sensor input 5}, 0 {zzz of sensor input 5}, 21 {yyyyyyy of sensor input 8}, 247 (F0h, 7Dh, 00h, 00h, 64h, 7Dh, 00h, 15h, F7h)

The sampled value from sensor input 5 is $125 * 8$ (i.e. 3 bit shift) + 0 = 1000

Message ID : SAMPLE DATA (4, 04h)

The SAMPLE DATA message contains a single snapshot of a sensor connected to a sensor input, whether the Wi-miniDig is in host or in stand-alone mode.

The [BODY] of the SAMPLE DATA message is composed of two or three bytes - the sensor input number, the first data byte, and, if the sensor input is set to 10-bit hi-res mode, the second data byte.

The [BODY] of the SAMPLE DATA message:

00000xxx, 0yyyyyy: (7-bit lo-res mode)
or
00000xxx, 0yyyyyy, 000zzz00: (10-bit hi-res mode)

xxx = [0..7]; sensor input number, where the first sensor input number = 0,
and the last (8th) sensor input number = 7
yyyyyy = [0.127]; the most significant bits (or a full data byte in lo-res mode)
zzz = [0..7]; the 3 least significant bits (used in 10-bit hi-res mode only)

Example:

When sampling sensor input 8 (provided it is turned off) and the sensor input is set to lo-res mode, the following message is received:

240, 125, 0 {DEV}, 4 {SAMPLE DATA}, 7 {xxx}, 64 {yyyyyy}, 247 (F0h, 7Dh, 00h, 04h, 07h, 40h, F7h)

The sampled value from sensor input 8 is 64.

When sampling sensor input 8 (provided it is turned off) and the sensor input is set to hi-res mode, the following message is received:

240, 125, 0 {DEV}, 4 {SAMPLE DATA}, 7 {xxx}, 10 {yyyyyy}, 10 {zzz}, 247 (F0h, 7Dh, 00h, 04h, 07h, 0Ah, 0Ah, F7h)

The sampled value from sensor input 8 is $10 * 8$ (i.e. 3 bit shift) + 10 = 90.

Waiver of Liability

This document is subject to change without notice. Infusion Systems Ltd. offers no warranty, limited or otherwise, on any of its products and associated documents.
UNDER NO CIRCUMSTANCES WILL INFUSION SYSTEMS LTD. BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, ANY INCIDENTAL DAMAGES, OR ANY CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT AND ASSOCIATED DOCUMENTS, EVEN IF INFUSION SYSTEMS LTD. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
